


THE



ІНСТРУКЦІЯ  
ПОКЛЕЙКИ  
ВНАХЛЕСТ

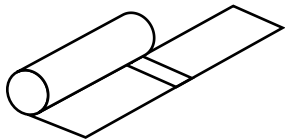


Перевірити шпалери на підлозі до початку поклейки (стиковку малюнку, колір)  
Після поклейки шпалери поверненню не підлягають !

## РОЗКЛАСТИ ШПАЛЕРИ


Перед поклейкою в першу чергу потрібно підготувати стіни: поверхня повинна бути чистою, гладкою, знежиреною і добре вбираючою вологу; залишки старих шпалер та шорсткості видалені, фарба зчищена, отвори та щілини, якщо такі є, зашпакльовані!

**Важливо !!!** обробити протигрибковою ґрунтовкою

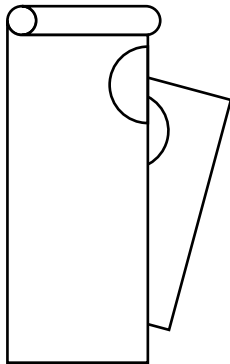


## ПОЄДНАТИ МАЛЮНОК

З'єднати малюнок з кількох частин для ясності подальшої роботи.  
У більшості поверхні стін не ідеально прямокутні, тому потрібно відбити вертикальну лінію за допомогою схилу і від неї клеїти першу смугу без нахилу. Потім приготувати клей

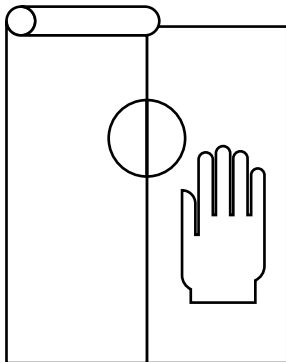

## НАНЕСТИ КЛЕЙ НА СТІНУ

Обережно рівномірними мазками нанести клей на стіну, особливу увагу приділяти краям. Після цього можна приклеїти першу частину шпалер. Складки розгладити валиком для шпалер. Клей на шпалери наносити не потрібно

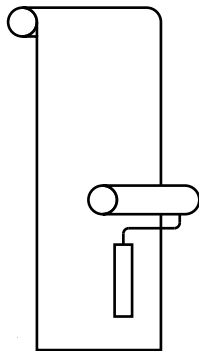


## НАКЛЕЇТИ ТА ПІДРІЗАТИ

Наступні частини клеїти  
внахлест, поєднуючи малюнок.  
Коли будуть приклеєні обидва  
полотна, по центру нахлесту  
прорізати під лінійку гострим  
ножем. Прибрати зайві смужки.

Потім відвернути стики і  
додатково промазати їх клеєм  
для стиків. Стик придавити  
гумовим валиком

### УВАГА !

Терти ганчіркою края  
заборонено, це пошкодить  
шпалери !

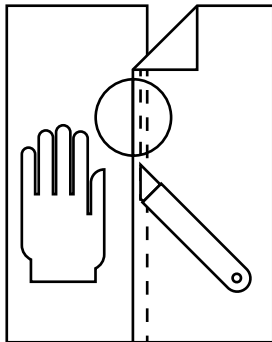


## **П Р И М І Т К А**

**При вологому прибиранні не потрібно давити та сильно тиснути, терти довго на одному місці. Ніжно протерти ганчіркою або серветкою**



**Не рекомендовано для поклейки у місцях з прямим доступом води (душові кабіни, сауни)**

GUIDE TO  
WRAP-AND-OVERLAP  
WALLPAPERING

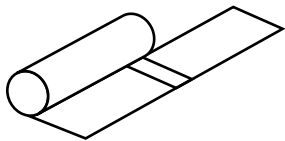




**Check the wallpaper on the floor before gluing (drawing, color)**

**After gluing wallpaper is not subject to an attorney!**


## **S P R E A D   P H O T O W A L L P A P E R**

The first thing that should be done before hanging the wallpaper, is preparing the walls, the same way as for putting up the usual wallpaper: the base surface should be clean, smooth, fat-free and well absorbent; the remains of old wallpaper and roughness should be removed, the paint should be scraped, holes and openings, if any, should be plastered. Prime the wall with antifungal primer, AND

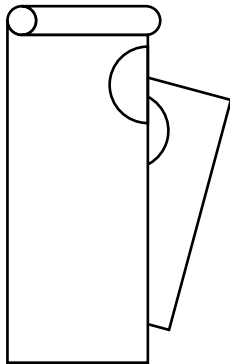

## MATCH THE PATTERN


Match the pattern consisting of several parts to make the further work clear. Since many walls are not strictly rectangular, it is necessary to draw an even vertical line on the wall with a plumb bob to hang the first strip without incline. – After that prepare the paste.

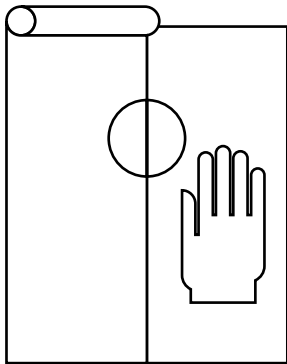

# 3

## APPLY PASTE TO SHEET


Apply the paste carefully to a wallpaper sheet with uniform strokes. Pay special attention to the edges. After that, you can hang the first part of the wallpaper. Smooth out the folds with a wallpaper roller. Do not apply paste on wallpapers!

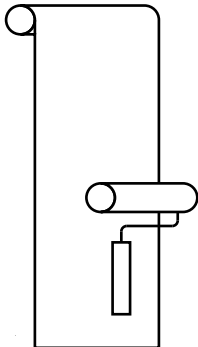

## HANG WRAP- AND-OVERLAP

Hang the subsequent parts wrap-and-overlap, matching the pattern. After both sheets are hung, cut along the center of the joint with a sharp knife using a ruler. Remove unnecessary strips.

Then fold back the joints and additionally lubricate them with glue for the joints. Press the joint with a rubber roller.

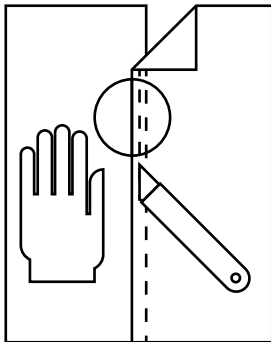

## **N O T E**

**Material – paper, vinyl coating. Resistant to soap, detergents and alcohol. It requires no special skills to hang it. Wet cleaning possible (after drying). Fire Safety Certificate B1 (fire-resisting material). Raw material – the Netherlands.**



**Not recommended for gluing in places with direct access to water (showers, saunas)**

[WWW.THEOSHOP1.COM](http://WWW.THEOSHOP1.COM)